



MSMC imaging systems enables multispectral imaging over an extended spectral range with a greater number of bands. Each system incorporates two cameras into a single housing. An internal beam splitter enables each camera to observe the same scene with minimal parallax.

## FEATURES

Camera 1	Camera 2
4.2 MP color	4.2 MP monochrome
440, 520, 600 nm	Customizable spectral range

- Captures co-registered spectral images simultaneously from 2 cameras
- High resolution and wider spectral range
- Custom spectral filters available
- Sustained frame rates @ 89 FPS
- Global Shutter CMOS sensor


## INTERIOR




- 1 - Camera 1
- 2 - Camera 2
- 3 - Adjustable 3 DOF stages
- 4 - Beam splitter

# DIMENSIONS


## FRONT VIEW

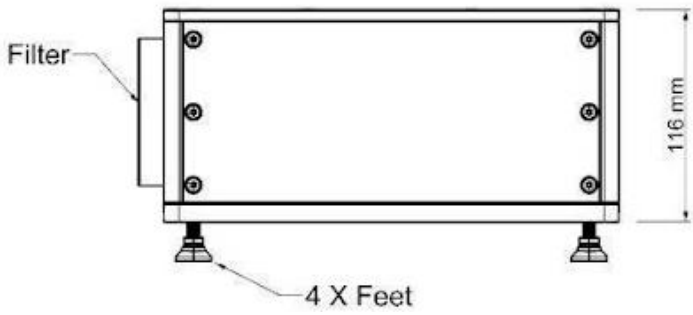


## LEFT VIEW

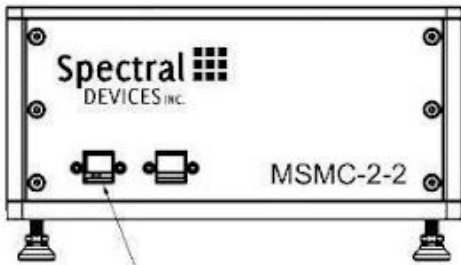


## RIGHT VIEW

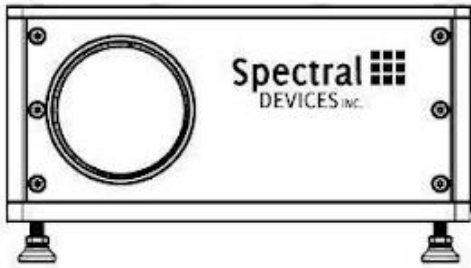

## TOP VIEW

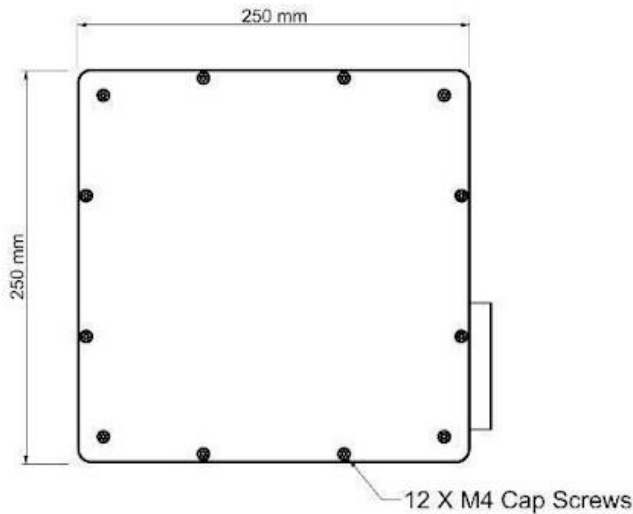


## BOTTOM VIEW

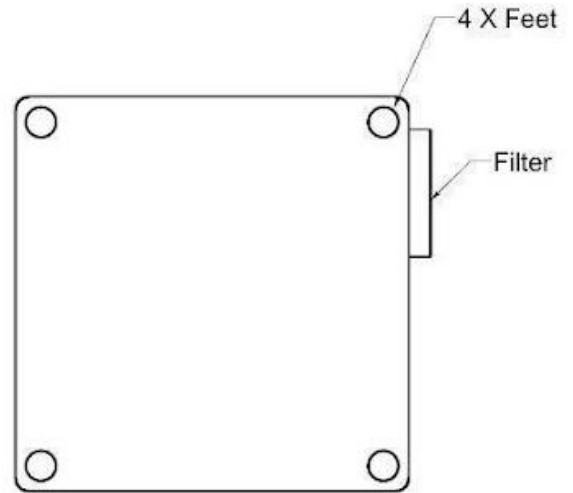

# QUANTUM EFFICIENCY

Camera 1

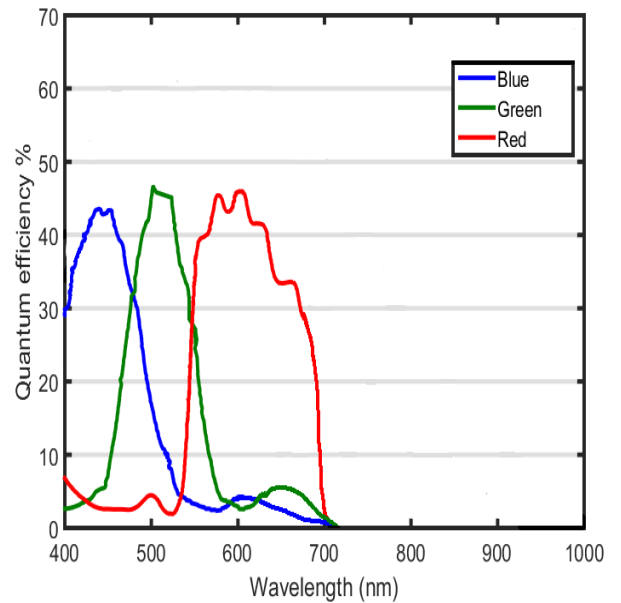

Camera 2

